


LML-13

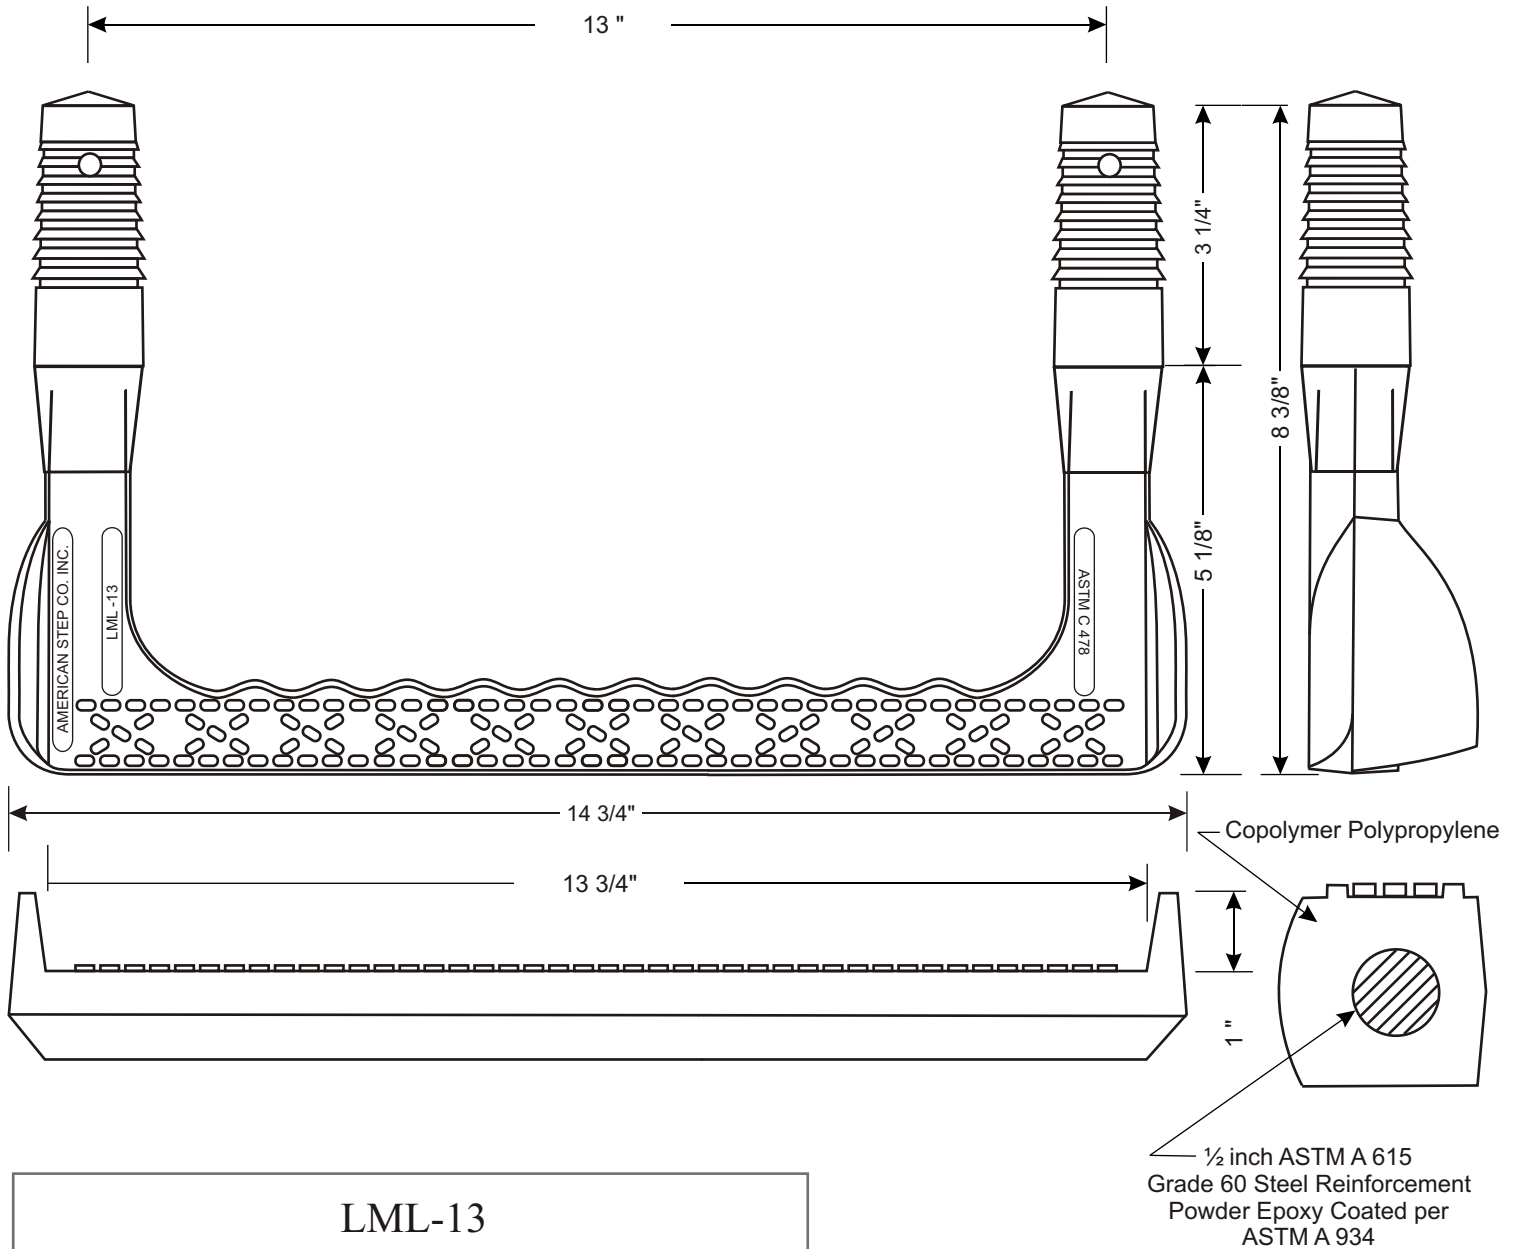

LML-13

Mechanical Lock Installation Methods
Minimum Concrete Strength Must Be 3000 psi.

Preformed Holes

Two preformed holes on 13" centers
Holes must be parallel
Diameter of holes are 1 3/8" tapering to 1 3/16" in 3 1/4" of depth

Drilled Holes

Drill two 1 1/4" holes on 13" centers with a minimum depth of 3 3/4"
Use 1 1/4" masonry bit for drilling.
Holes must be parallel.

Drive step with sledge hammer until both legs are completely seated

This step meets or exceeds ASTM C 478 and OSHA Standards when properly installed.



American Step Company, Inc.
P.O. Box 137
830 East Broadway
Griffin, GA 30224-0137

800-988-STEP
770-467-9844 (OFFICE)
770-467-8011 (FAX)