


PI-10-NCR

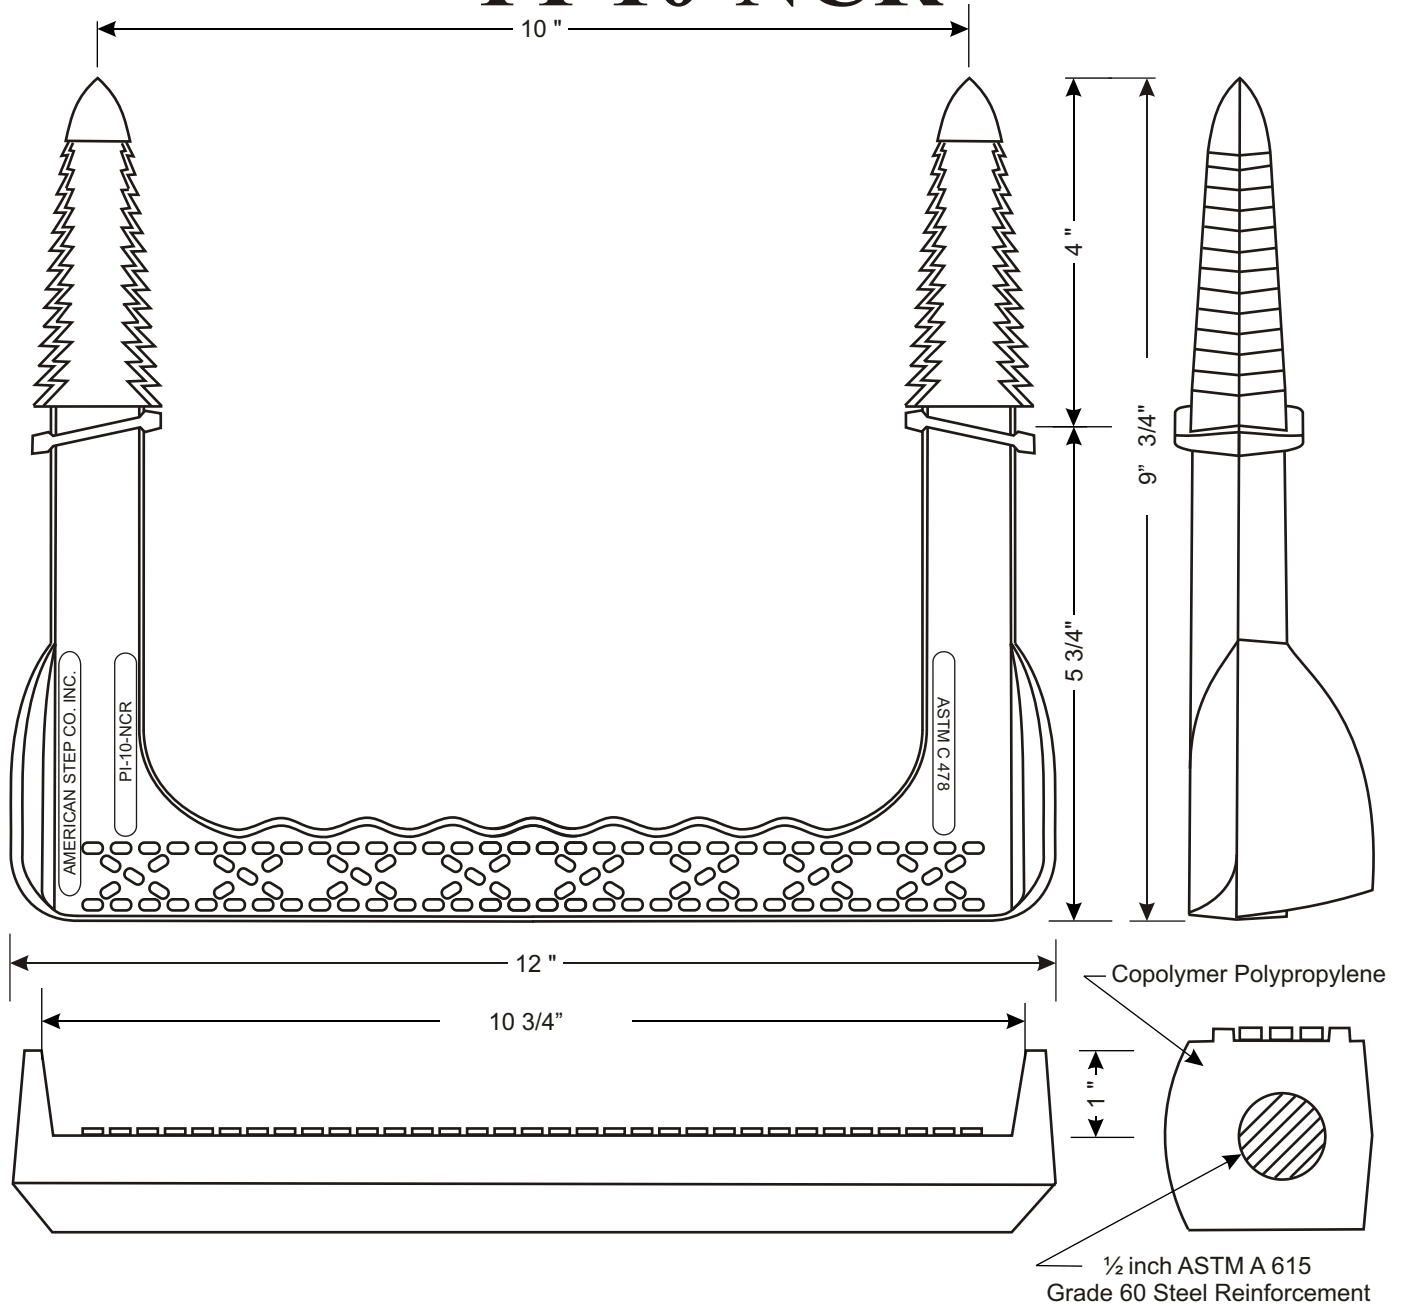

PI-10-NCR

Push In Installation Method
FOR INSTALLATION INTO "GREEN" (UNCURED CONCRETE)

- Align step so there is no contact with the manhole reinforcing cage.
- While manhole is still in it's exterior form, push step legs into the "green concrete either manually or mechanically.
- To minimize disruption of the uncured concrete, push the step in evenly so that both legs are inserted simultaneously.

This step meets or exceeds ASTM C 478 and OSHA Standards when properly installed.



American Step Company, Inc.
P.O. Box 137
830 East Broadway
Griffin, GA 30224-0137

800-988-STEP
770-467-9844 (OFFICE)
770-467-8011 (FAX)

<http://www.americanstep.com>